

WIRELESS HOUR METER




PART #328815

Installation steps:

1. Determine the mounting location. Usually the frame is a good choice. Make sure its an area that can not easily be hit if the bike falls over, and keep away from the engine and exhaust.
2. Clean the surface area where you wish to mount the hour meter. We recommend using brake cleaner and then isopropyl alcohol to remove any surface residue.
3. Use the adhesive strip on the back of the hour meter to place the hour meter in the desired location. (zip ties not included)
4. You can secure the hour meter with zip ties and routing them through the holes on the hour meter.
5. Start the engine to check that the hour meter is working. The display will turn on showing the working hours and the blinking dot. It will read 0.1 for every 6 minutes the bike is running.

Sensitivity Setting:

1. Press S and the display will show 'tot' for a few seconds. The display will then show the total recorded hours for about 8 seconds. While the total hours is showing, press S to show "PAr", press S again to enter the sensitivity settings.
2. **To Set Sensitivity:** If display shows HI, press S to change it to LO. Display will switch off after a few seconds. This means the sensitivity is set. If the sensitivity shows LO, press S to change it to HI.

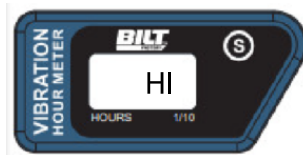

Partial Counter:

1. Press S, the display will show "tot" and then total hours. While showing total hours, press S again to show "PAr". After a few seconds, it will show the partial recorded time that you can use for service intervals.
2. **To Reset:** While showing the partial recorded time, hold S until the display blinks "----". This means the partial counter is reset to zero.



Lock Mode:

1. Press S to show "tot". While the display is flashing "tot", hold S for 8 seconds to enter Lock Mode (Loc). To exit lock mode, press S again.



FAQ:

1. You cannot change the battery in this unit. The battery will last approximately 5 years.
2. You cannot add or remove hours logged onto the meter.
3. The lock function can only be activated with the bike off.