

### **Custom Dynamics® Off Road Rocker Switch Installation Instructions**

We thank you for purchasing the Custom Dynamics® Off Road Rocker Switch. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

**Part Numbers:** CD-OR-SWITCH

#### Package Contents:

- CD Off Road Rocker Switch (1)
- Instructions (1)

Fits: Universal 12VDC systems. This fits in standard mounting hole for SXS rocker switches (1.45" x 0.83").





## ATTENTION



Please read all Information below before Installation


Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

#### Installation:

- Remove all necessary parts to disconnect the negative battery cable from the battery.
- Select mounting location for switch and install CD Off Road Rocker Switch. Dimensions shown in Figure 1.
- 3. Route SD2 Off Road Harness wiring to CD Off Road Rocker Switch and wire as shown in Figure 1.
- 4. Reinstall all necessary parts to reconnect the negative battery cable to the battery.
- 5. Test the CD Off Road Rocker Switch for proper operation.

#### **SD2 Off Road Harness**

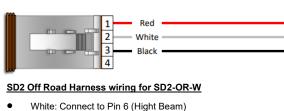



- Red: Connect to Pin 3 (Low Beam)
- Black: Connect to Pin 7 (Ground)

#### SD2 Off Road Harness wiring for SD2-OR-Y

- White: Not used
- Red: Connect to Pin 3 (Low Beam)
- Black: Connect to Pin 7 (Ground)

# **CD Off Road Rocker Switch** 12VDC

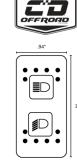

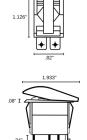

#### **Rocker Switch Pinouts**

- Pin 2 or 5 = +12Vdc
- Pin 7 = Ground
- Pin 3 = Low Beam
- Pin 6 = High Beam

Questions? Email: Info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST