

# INSTALLATION INSTRUCTIONS

**DRAG SPECIALTIES/DON HOTOP  
FENDER TO SADDLEBAG COVERS  
P/Ns DS-720121/9/37/9**

**ATTENTION INSTALLER:** (if other than owner):  
Please forward this instruction sheet to the purchaser of this product. These instructions contain valuable information necessary to the end user.

**INTRODUCTION:** These instructions describe the procedure for modifying the OEM antenna mounting bracket when installing the Drag Specialties/Don Hotop Fender to Saddlebag Covers on 98-99 FLTR models equipped with a radio antenna.

Review instructions carefully before beginning, as they contain important information. Please retain for future reference.

Particularly important information is distinguished in these instructions by the following notations:

**NOTE:** A NOTE provides key information to make procedures easier or clearer.

**CAUTION:** A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle and/or accessories.


**WARNING!:** A WARNING indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

## TOOLS REQUIRED:

hacksaw  
1/4" drill bit and drill  
1/2" socket  
3/4" combination wrench

## PROCEDURE:

1. After removing the left saddlebag, remove the antenna mast and the antenna cable from the antenna mounting bracket.
2. Remove the antenna base assembly from the mounting bracket and reinstall upside down.
3. Remove the antenna mounting bracket, turn it upside down and temporarily remount it to the fender support strut. The antenna base assembly will now be toward the front of the bike.

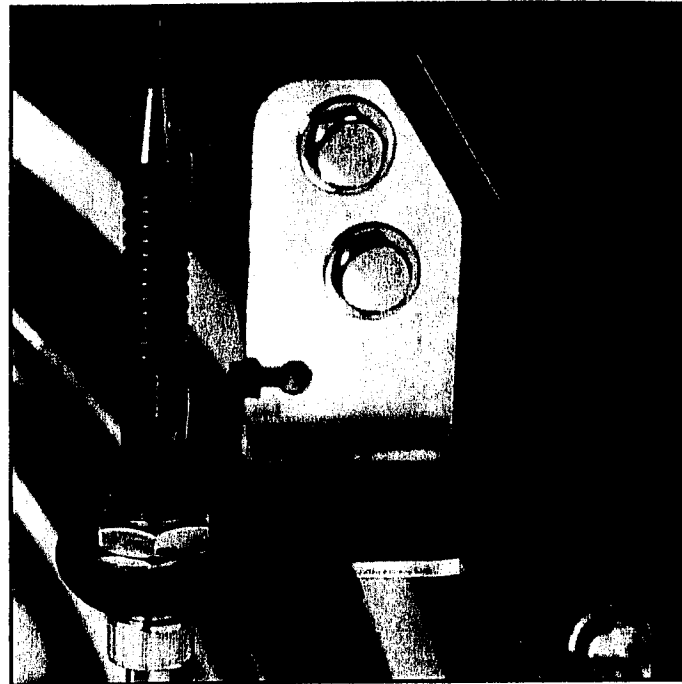

4. Mark a line on the bracket parallel to the rear edge of the fender support strut, but in (toward the front of the bike) 1/8". Remove from the bike and cut along this line with a hacksaw.
5. Referring to the photo above for location, mark a spot 3/8" back from the front edge of the bracket and up 3/4" from the horizontal surface and drill and deburr a 1/4" hole.
6. Install the Hotop cover and the antenna mounting bracket to the fender support strut. Do not fully tighten the bolts holding the antenna mounting bracket.
7. Reattach the antenna cable to the antenna base assembly and secure to the fender support strut and the 1/4" hole in the antenna mounting bracket with cable ties.
8. Slide the antenna mast down, from the top, between the Hotop cover and the saddlebag mounting bracket and reattach to the antenna base assembly. Adjust the antenna mounting bracket so the antenna mast does not touch the saddlebag support or the Hotop cover and tighten the mounting bolts.

**WARNING!:** Before operating motorcycle, be sure all hardware is tight.



# INSTALLATION INSTRUCTIONS

## DRAG SPECIALTIES/DON HOTOP FENDER TO SADDLEBAG COVERS P/Ns DS-720121/9/37/9

**ATTENTION INSTALLER:** (if other than owner): Please forward this instruction sheet to the purchaser of this product. These instructions contain valuable information necessary to the end user.

**INTRODUCTION:** These instructions describe the procedure for modifying the OEM antenna mounting bracket when installing the Drag Specialties/Don Hotop Fender to Saddlebag Covers on 98-99 FLTR models equipped with a radio antenna.

Review instructions carefully before beginning, as they contain important information. Please retain for future reference.

Particularly important information is distinguished in these instructions by the following notations:

**NOTE:** A NOTE provides key information to make procedures easier or clearer.

**CAUTION:** A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle and/or accessories.

**WARNING!:** A WARNING indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

### TOOLS REQUIRED:

hack saw  
1/4" bit and drill  
1/2" socket  
3/4" combination wrench

### PROCEDURE:

1. After removing the left saddlebag, remove the antenna mast and the antenna cable from the antenna mounting bracket.
2. Remove the antenna base assembly from the mounting bracket and reinstall upside down.



3. Remove the antenna mounting bracket, turn it upside down and temporarily remount it to the fender support strut. The antenna base assembly will now be toward the front of the bike.
  4. Mark a line on the bracket parallel to the rear edge of the fender support strut, but in (toward the front of the bike) 1/8". Remove from the bike and cut along this line with a hack saw.
  5. Referring to the photo above for location, mark a spot 3/8" back from the front edge of the bracket and up 3/4" from the horizontal surface and drill and deburr a 1/4" hole.
  6. Install the Hotop cover and the antenna mounting bracket to the fender support strut. Do not fully tighten the bolts holding the antenna mounting bracket.
  7. Reattach the antenna cable to the antenna base assembly and secure to the fender support strut and the 1/4" hole in the antenna mounting bracket with cable ties.
  8. Slide the antenna mast down, from the top, between the Hotop cover and the saddlebag mounting bracket and reattach to the antenna base assembly. Adjust the antenna mounting bracket so the antenna mast does not touch the saddlebag support or the Hotop cover and tighten the mounting bolts.
- WARNING!:** Before operating motorcycle, be sure all hardware is tight.

**DRAG SPECIALTIES**

Box 9336, Minneapolis, MN 55440