



TOMBSTONE TAILLIGHT

4990

FITS: UNIVERSAL APPLICATIONS

PART#	INCLUDED
404990L	1 Taillight Lens
609440L	1 L.E.D. Board Assembly
404990LH	1 Lens Housing
404990	1 Tail Light Housing
404990G	1 Flat Gasket – Soft Rubber
201152	3 8–32 X 9/16" Phillips Head Pan Screw
200097	2 1/4"–20 Nylock Nut
201153	1 1/4"–20 X 5/8" Ribbed Neck Domed Smooth Head Bolt
201154	1 1/4"–20 X 1 3/8" Ribbed Neck Domed Smooth Head Bolt
904990	1 Wiring Kit Including:
400834	3 T-Tap Female Quick Slide Scotch Lock Connector
400846	3 Male Scotch Lock Connector
400815	3 4" Cable Tie
401209	1 Dielectric Grease
304990	1 Instruction Sheet

TOOLS SUGGESTED

7/16" Socket or Combination Wrench, Pliers, Wire Stripper/Crimper, 1/4" Drill Bit

IMPORTANT INTENDED FOR USE IN CUSTOM APPLICATIONS

PROCEDURE

STEP 1 Center the Tombstone Taillight and mark the places you will need to drill in your fender for the bolt holes. Use your 1/4" drill bit to drill these holes. You will also need to drill an additional hole for routing the wires through your fender. Drill this hole in relation to where the wires exit the Taillight housing.

STEP 2 Feed the wires through the rubber gasket and then feed the wires through the hole you drilled in your fender for wire routing. Set the Tombstone Taillight in place with the bolts from the taillight through the holes you drilled in the fender. Fasten the tail light in place using the 1/4"–20 Nylock nuts for each bolt underneath the fender. See below for wiring instructions.



STEP 3 WIRING THE TAILLIGHT

NOTE Make sure you disconnect the negative cable from your battery while connecting ALL wires.

For connecting these wires you will be using T-Tap Female Quick Slide Scotch Lock Connectors and Male Scotch Lock Connectors. See PIC.1 for proper usage of these connectors. The Tombstone's black wire is ground, the red wire operates the run function and the white wire operates the brake function. Connect these wires to your bikes corresponding wires.

STEP 4 Reconnect the negative cable to your battery, start the bike and test for function. Use supplied 4" cable ties to secure the wires away from moving parts.

4990-12HD-1203

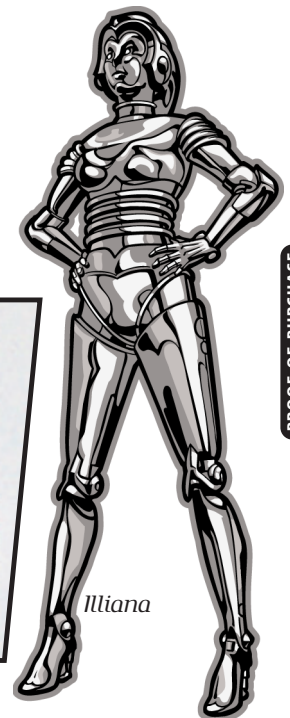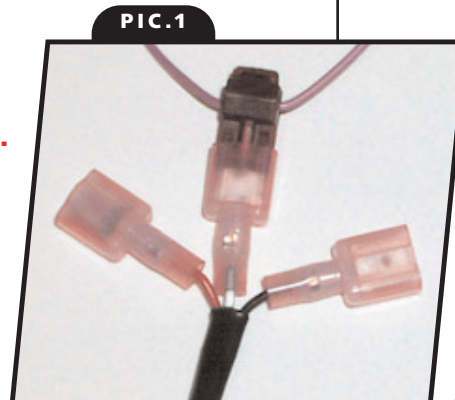

PROOF-OF-PURCHASE

E-MAIL

techsupport@kuryakyn.com or call 715.247.2983

WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.

CONSEQUENTIAL DAMAGES: Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG

For purchasing Kuryakyn™ products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025 Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2003 Kuryakyn USA™ All Rights reserved.