

401 South Grand Ave., Santa Ana, CA 92705 Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com



# 2006-07 Kawasaki **ZX-14**

V.A.L.E. Exhaust System

Part # 005-1490406DV / 005-1490407DV / 005-1490408DV



#### **Parts List**

Qty.	Description	Part Number
1	ZX-14 M-2 Muffler Canister - Right Side	Varies
1	ZX-14 M-2 Muffler Canister - Left Side	Varies
1	ZX-14 Slip-On Tube - Right Side	005-14904SR
1	ZX-14 Slip-On Tube - Left Side	005-14904SL
2	Muffler Canister Clamp	Varies
1	HARDWARE KIT	005-149-3
2	X-Lite <sup>™</sup> V.A.L.E. <sup>™</sup> Retaining Ring	005-7-2-2
2	Barrel Clamp	005-27-65MSH
1	8mm Spacer with 10mm Clearance Hole	005-S-810
1	10x60mm Socket Head Cap Screw	005-SH1060
1	10x70mm Socket Head Cap Screw	005-SH1070
2	10mm Nylon Lock Nut	005-NN10
2	10mm Washer	005-WF10
1	5mm Long Handle Ball end hex key	005-9-18610
1	Permatex Ultra Black Gasket Maker	031-P22072
8	6x14mm Socket Head Cap Screw	005-SH614
8	6mm Split Lock Washer	005-WL6

#### **IMPORTANT - PLEASE READ CAREFULLY**

We recommend that this performance part be installed by a qualified motorcycle technician. If you have any doubts as to your ability to install this performance part, please consult with your local motorcycle dealer. Read all instructions first before starting installation. Make sure the motorcycle and exhaust system are completely cool before starting the installation. Also, make sure the bike is secure on a centerstand or ideally a service lift during installation. Be sure to save all stock components for possible use later.

#### **Installation Instructions**

- Make sure the bike is completely cool before starting the installation. Make sure the bike is secure on a centerstand or ideally a service lift.
- Loosen both of the clamps near the collector on each side.



Remove the stock muffler mounting bolts and remove the stock mufflers, one at a time.







4. Slide the V.A.L.E. X-Rings over the slip-on tubes and <u>loosely</u> attach to the TBR muffler canisters, using the 6x14 screws and the supplied split lock washers. The slip-on tubes are different - one left and one right. If the badge on the slip-on tube is upside down, it is on the wrong side.



Slide the supplied muffler canister clamps over the TBR muffler canisters.



Place the supplied barrel clamp around the end of the TBR slip-on tube, and add a small bead of the included hi-temp sealant to the inside of the slip-on tube.



7. Slide the slip-tube onto the stock collector.



 Attach the muffler canisters to the bike using the supplied allen bolts. The left side will require the use of a spacer and the longer 70mm allen bolt (included) in order to provide clearance for the chain.



 Check to be sure that both exhausts are positioned and aligned correctly. Once you are satisfied with the position of the exhaust, tighten the barrel clamp, then the V.A.L.E. X-Ring, followed lastly by the muffler canister clamp.







(Continued on page 2)



401 South Grand Ave., Santa Ana, CA 92705 Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com



# 2006-07 Kawasaki **ZX-14**

V.A.L.E. Exhaust System
Part # 005-1490406DV / 005-1490407DV / 005-1490408DV



### **IMPORTANT - PLEASE READ CAREFULLY**

We recommend that this performance part be installed by a qualified motorcycle technician. If you have any doubts as to your ability to install this performance part, please consult with your local motorcycle dealer. Read all instructions first before starting installation. Make sure the motorcycle and exhaust system are completely cool before starting the installation. Also, make sure the bike is secure on a centerstand or ideally a service lift during installation. Be sure to save all stock components for possible use later.

#### **Installation Instructions**

(Continued from page 1)

- Double check your work to ensure everything is tight and properly installed.
- 11. Before you run the bike, clean off all fingerprints and dirt, as any oily residue will etch the metal and become somewhat permanent when the system gets hot. Run the bike and enjoy. It is normal for some white smoke to appear the first time you start the bike. This is packing/manufacturing oil from inside the pipe burning off. Check for gaps or leaks. If you find a leak, a little high temperature silicon sealant should fix it. After 50 to 100 miles, recheck all fasteners for tightness.



# Care & Cleaning / Warranty Information

# Care & Cleaning

Keep system free of dirt and moisture. Store in a cool, dry place. For cleaning use a mild spray cleaner. Always apply cleaner or polish with a soft, clean cloth.

Stainless Header System: Polished stainless steel pipes will turn a light golden hue after a few heat cycles, this is a normal characteristic of high quality stainless steel.

Carbon Fiber Mufflers: Always make sure the fiberglass packing inside is in good condition and not burned out, as exhaust heat inside an empty canister will deteriorate the Carbon Fiber sleeve. TBR sells repack kits (TBR part # 005-10038) that include new rivets and repack material as well as a drill bit (#30), making it easy to do yourself. Also, NEVER dyno test your bike with carbon fiber mufflers installed - the intense heat and lack of cooling air can quickly cause the CF material to burn. Two Brothers Racing does not provide a warranty for burned carbon fiber.

Aluminum Mufflers: Use an aluminum or mag wheel polish such as Mother's to restore the bright finish to factory spec.

# Warranty Information

Two Brothers Racing products are intended for closed course competition purposes only, and therefore are sold "as is" without warranty. Two Brothers Racing specifically disclaims any warranties of merchantability or fitness for a particular purpose and disclaims all responsibility for consequential and incidental damages or any other losses arising from the use of these products or parts.



401 South Grand Ave., Santa Ana, CA 92705 Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com



2006-07 Kawasaki ZX-14

V.A.L.E. Exhaust System Part # 005-1490406DV / 005-1490407DV / 005-1490408DV






# 005-1490406DV





Qty	. Description	Part Number
1	ZX-14 Aluminum M-2 Muffler Canister - Right Side	005-206M
1	ZX-14 Aluminum M-2 Muffler Canister - Left Side	005-206ML
1	ZX-14 Slip-OnTube - Right Side	005-14904SR
1	ZX-14 Slip-OnTube - Left Side	005-14904SL
2	Muffler Canister Clamp	005-2C
1	HARDWARE KIT	005-149-3
2	X-Lite <sup>™</sup> V.A.L.E. <sup>™</sup> Retaining Ring	005-7-2-2
2	Barrel Clamp	005-27-65MSH
1	8mm Spacer with 10mm Clearance Hole	005-S-810
1	10x60mm Socket Head Cap Screw	005-SH1060
1	10x70mm Socket Head Cap Screw	005-SH1070
2	10mm Nylon Lock Nut	005-NN10
2	10mm Washer	005-WF10
1	5mm Long Handle Ball end hex key	005-9-18610
1	Permatex Ultra Black Gasket Maker	031-P22072
8	6x14mm Socket Head Cap Screw	005-SH61
8	6mm Split Lock Washer	005-WL6

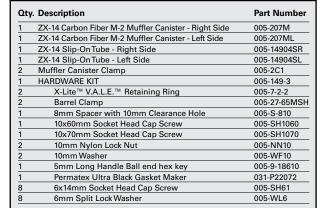

# 005-1490408DV



Qty.	Description	Part Number
1	ZX-14 Titanium M-2 Muffler Canister - Right Side	005-208M
1	ZX-14Titanium M-2 Muffler Canister - Left Side	005-208ML
1	ZX-14 Slip-OnTube - Right Side	005-14904SR
1	ZX-14 Slip-On Tube - Left Side	005-14904SL
2	Muffler Canister Clamp	005-2C2
1	HARDWARE KIT	005-149-3
2	X-Lite™ V.A.L.E.™ Retaining Ring	005-7-2-2
2	Barrel Clamp	005-27-65MSH
1	8mm Spacer with 10mm Clearance Hole	005-S-810
1	10x60mm Socket Head Cap Screw	005-SH1060
1	10x70mm Socket Head Cap Screw	005-SH1070
2	10mm Nylon Lock Nut	005-NN10
2	10mm Washer	005-WF10
1	5mm Long Handle Ball end hex key	005-9-18610
1	Permatex Ultra Black Gasket Maker	031-P22072
8	6x14mm Socket Head Cap Screw	005-SH61
8	6mm Split Lock Washer	005-WL6