
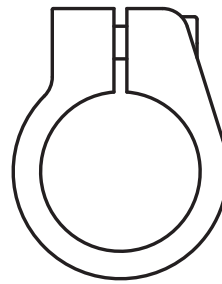


# OE INDICATOR SPEEDO SIDE MOUNT ASSY

PART NO: 10-319 to 10-322

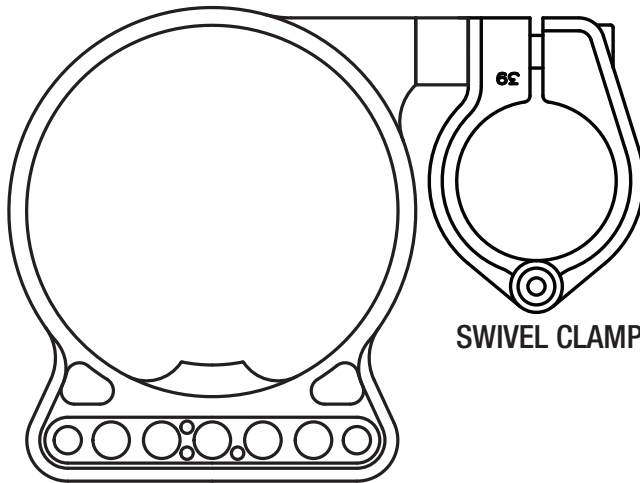

M8-1.25 SOCKET CAP SCREW, CAD  
NOTE: BLUE LOCTITE BEFORE FINAL  
INSTALLATION.  
USE 6MM HEX DRIVER/KEY

**IMPORTANT!** Sportster Custom and Forty-Eight models require the Harley-Davidson speedo back plate and cushioning (HD #67320-95 & 67104- 95).

## Mount clamp and speedo housing on left fork

Swivel Clamp Installation skip steps 1-3.

If using the swivel clamp you do not have to lift the bike on a bike stand to lower the fork tube legs.

1. Lift bike on bike stand to get the front wheel off the ground.
2. Loosen upper and lower triple clamp pinch bolts.  
Slide fork tubes down far enough to place clamp on left fork tube. Slide fork tubes back into place and torque to factory spec. 30' - 35' lbs.
3. Slide fork clamp bolt through the fork clamp mount into the speedometer mount using a 6mm hex driver/key.
4. Remove speedo and indicator module from stock bracket by removing back plate, reset switch, plug and cushioning from OEM speedometer clamp.
5. Reassemble on the Joker speedometer side mount.
6. Using BLUE LOCTITE mount speedo side mount to fork clamp.
7. Make sure you clear the gas tank before tightening down mounting screw.