




RSD UPPER FORK TUBE COVER




RSD UPPER FORK TUBE COVER INSTALLATION

1. Turn your motorcycle off, place securely on a lift or center stand and disconnect the battery.
2. Begin by removing the seat and fuel tank.
NOTE: Consult your HD service manual for specific instructions.
3. Loosen the two pinch bolts and center stem on the top clamp. Remove the clamp.

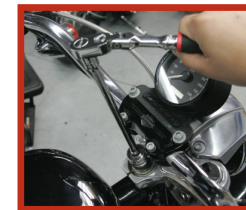

4. Install the first o-ring on to the fork leg then the RSD fork tube cover and the last o-ring after. Repeat on other side.

NOTE: Place the side with the part number facing downward.

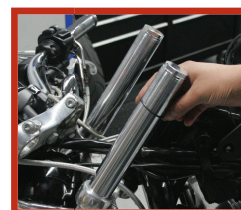

5. Install the top clamp and center stem. Tighten both pinch bolts.
NOTE: Consult your HD service manual for specific instructions to reinstall top clamp and center stem.
6. Install any other components removed during installation.



7. Hit the road!

PRODUCT DESCRIPTION

39mm CHRONO	0208-0115M	39mm CHRONO XLI200	0208-0130M
39mm SMOOTHIE	0208-0116M	39mm SMOOTHIE XLI200	0208-0131M
39mm TRACKER	0208-0117M	39mm TRACKER XLI200	0208-0132M
41mm CHRONO	0208-0118M	49mm CHRONO	0208-0121M
41mm SMOOTHIE	0208-0119M	49mm SMOOTHIE	0208-0122M
41mm TRACKER	0208-0120M	49mm TRACKER	0208-0123M