



INSTALLATION

FLIP BLADES HIGHWAY PEGS

7540

PARTS INCLUDED

- 1 Right Hand Flip Blade Highway Peg
- 1 Left Hand Flip Blade Highway Peg
- 1 Right Hand Stiffener Plate—Traditional Boards
- 1 Left Hand Stiffener Plate—Traditional Boards
- 1 Hardware Kit Including:
 - 4 1/4"-20 x 1/2" Socket Head Cap Screws
 - 8 1/4"-20 x 5/8" Button Head Cap Screws
 - 8 1/4" Flat Washers
 - 8 1/4"-20 Nylock Nuts
 - 2 #10-32 x 3/8" Set Screws
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.



THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.



This indication alerts you to the fact that ignoring the contents described herein can result in potential injury.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches or Socket Set and Ratchet, Screwdrivers, Drill Bits, Drill, Center Punch, Pliers, Side Cutters/Knife, Blue Loctite

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.



YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge.

Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com



THIS ASSEMBLY IS ONLY AS STRONG AS THE OEM COMPONENTS IT IS ATTACHED TO. ADDING THIS FOOTREST POSITION CAN INCREASE LEVERAGE ON THE OEM EQUIPMENT. THIS ACCESSORY IS INTENDED AS A FOOT REST ONLY. DO NOT STAND ON, OR APPLY EXCESSIVE FORCE TO THESE PEGS.



STEP 2

Starting with the right side, remove the footboard pad from the base by gently pulling up on the rubber pad while simultaneously pushing on the rubber darts (PIC 1) protruding from the underside of the footboard assembly.

NOTE: It will be easier to fully remove the floorboard before attempting to drill any of the holes.

STEP 3

Lay the stiffener plates on the footboard base as shown PIC 2. Make sure that you place the stiffener plate with the two tapped holes to the front of the board. Use this plate as a template to mark the position of the six mounting holes. PIC 2 Use a center punch or felt tip pen to mark the hole positions.

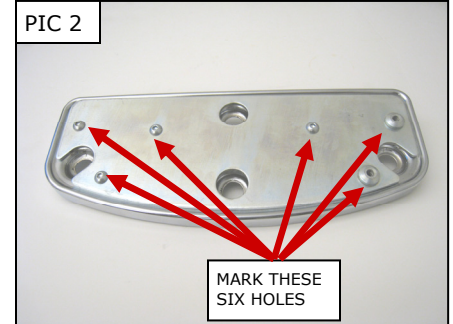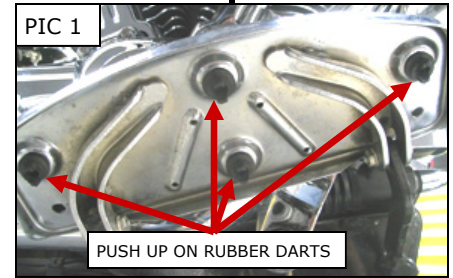

NOTICE


MEASURE TWICE – DRILL ONCE. Double check all reference marks made on the floorboard base BEFORE drilling. Kuryakyn will not be responsible for incidental or consequential damages resulting from this installation.

STEP 4

Once the holes are clearly marked, remove the plate and use at least a 1/4" drill bit (or slightly oversized drill bit for tolerance) to drill all six of the holes.


STEP 5

Loosely install the stiffener plate using the four rear mounting holes making sure that the two-tapped holes are to the front of the board and with the flat side down. Insert the 1/4"-20 x 5/8" button socket cap screws through the stiffener plate and base. Secure with the 1/4" flat washers, and nylon locking nuts from the bottom. PIC 2

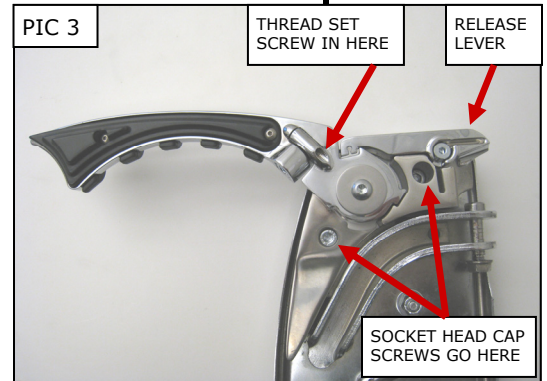

STEP 6

Turn the board over and loosely install two of the 1/4"-20 X 1/2" socket head cap screws in the two tapped holes in the front of the board to help keep these lined up. Tighten the rear four mounting bolts securely.

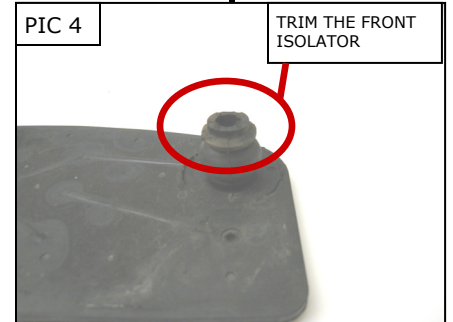

STEP 7

On the front rubber isolators dart (bottom of the floorboard pad), you will have to cut the top two little rubber nipples off to have adequate clearance for the flip blade. PIC 4

STEP 8

Wet the Isolators with soapy solution and reinstall the rubber pad to the steel footboard body. You may have to carefully pull the rubbers through the holes in the board with pliers.

STEP 9

Remove the two socket head cap screws from Step 6. Place the right flip blade on the footboard so the mounting holes line up with the forward two mounting holes. PIC 3 Place a drop of Blue Loctite on the two 1/4"-20 x 1/2" socket head cap screws and install them through the mount, through the floorboard base and into the front two holes on the stiffener plate.

-cont.-

STEP 10 Tighten all fasteners securely.

STEP 11 Install one of the included #10-32 X 3/8" set screws into the location shown in PIC 3. This set screw will allow you to fine tune the footpeg angle. Raise the end of the footpeg by tightening the set screw. Loosening it will lower the end of the peg. **Always check to make sure the footpeg will fully retract under the floorboard after adjustment.**

NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

STEP 12 Reinstall the board back to the bike after all the Flip Peg fasteners have been tightened. Tighten the board mounting fasteners securely.

STEP 13 Repeat all steps for opposite side.

STEP 14 To open the flip blade simply reach down and physically flip it out with your hand. To close you will have to press the release lock (PIC 3) to unlock the arm and fold it in.

⚠ WARNING

MAKE SURE THE NEW FOOT POSITION WITH THE FLIP BLADES OPEN DOES NOT INTERFERE WITH THE OPERATION OF THE FOOT CONTROLS. INTERFERENCE WITH THE FOOT CONTROLS MAY CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.

⚠ WARNING

DO NOT ATTEMPT TO OPEN OR CLOSE THE FLIP BLADES WHILE THE MOTORCYCLE IS IN MOTION.

⚠ WARNING

CHECK TO MAKE SURE THAT THERE IS PROPER GROUND CLEARANCE FOR CORNERING. LOSS OF CONTROL OF THE MOTORCYCLE AND SERIOUS INJURY MAY OCCUR IF THERE IS INADEQUATE CORNERING CLEARANCE.

⚠ CAUTION

Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.