



Custom Dynamics® Magic Strobes-RSG Installation Instructions

We thank you for purchasing the Custom Dynamics® Magic Strobes-RSG Module! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: MAGIC-STROBES-RSG

Package Contents:

- Magic Strobes Plug and Play Module (1)
- Instructions

Fitment: 2014 & up Street Glide, Street Glide Special, 2015 & up Road Glide, Road Glide Special, 2014 & up Electra Glide Ultra Classic/Ultra Classic Lo, Ultra Limited/Ultra Limited Lo, 2015 CVO Street Glide

Important: This product is intended for LED use only, do not use with incandescent bulbs.

Installation

1. Secure motorcycle on level surface. Remove seat. Disconnect negative battery cable from the battery. Locate and unplug the lighting connector to the rear fender. (see photos below for harness locations specific to each model)
2. Plug the Magic Strobes™ RSG Module, in-line, into the rear lighting harness and into the bike's wiring harness.
3. Re-connect the battery's negative battery cable to the negative of the battery.
4. Locate a secure place for the Magic Strobes™ RSG unit that will not interfere with the secure placement of the seat or side cover.

Initial Setup and operation

5. Locate the two switches and rotary dial. Be sure the rotary dial is set to position 0. Note there is a screw driver slot to make the dial turn easier, this is not the pointer, there is small arrow on the dial, this is the pointer that should now be at position 0.
6. Make sure switch 1 & 2 are in the ON position.



**FOR LED USE ONLY, DO
NOT USE WITH
INCANDESCENT BULBS.**



Electra Glide Connector Location



Street Glide/Road Glide Connector Location



Verify Black plug goes to rear fender


Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

7. Select the desired strobe setting listed below with the power off. Always turn power off before changing settings.
8. Turn power on and test for function of the turn signals, running and brake signals with desired setting.
9. Switch 1 enables you to turn the strobe feature on/off on the rear turn signals (if equipped), or other lights installed such as our Fillerz™ or Plasma Rods™.
10. Switch 2 enables you the ability to turn on/off the center brake (if equipped) strobe signal.

Flash Pattern Information

- Pattern 0: Four Flashes then Solid
- Pattern 1: Four Flashes, Solid for 3 Seconds, Repeat
- Pattern 2: Seven Flashes then Solid
- Pattern 3: Seven Flashers, Solid for 3 Seconds, Repeat
- Pattern 4: Quad Strobe then Solid for 1 Second then Quad Strobe
- Pattern 5: Quad Strobe, Solid for 1 Second, then Quad Strobe, Solid for 3 Seconds, then Repeat
- Pattern 6: Blaster X Pattern for 3 seconds, then Solid
- Pattern 7: Constant Blaster X Pattern
- Pattern 8: Constant Fast Strobe 5 Seconds, then Solid
- Pattern 9: Constant Fast Strobe Pattern

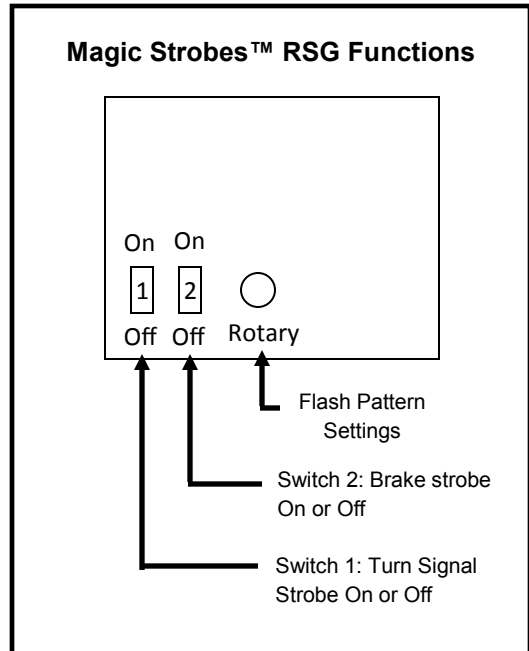

CUSTOMLED