


CUSTOM MOTORCYCLE ACCESSORIES

NEW RAGE CYCLES

MV AGUSTA 675/800 FRONT TURN SIGNALS

1. Remove allen bolt for access (photo 1).
2. Unplug stock connector and rubber grommet (photo 2).
3. Cut male end of stock connector and solder onto NRC turn signal wire.
4. Plug connector back onto bike.
5. Slide torx bolt into stock location on the side of the bike, threading into provided nut plate (photo 3).

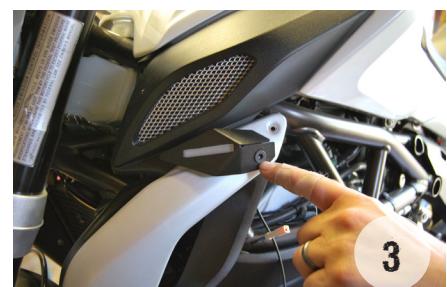

To inquire about custom parts installations

CONTACT US

INFO@NEWRAGECYCLES.COM | 914.339.2929