

1. ADAPT YOUR DEVICE

Center the iOadapt and adhere. Wait 1 hour before first use. Use the included iOskin underneath iOadapt to avoid permanency.



2. INSTALL

The Kustom Semisphere Mount bolts to the clutch lever clamp. Hardware included.
Tools needed: 5mm allen



3. ATTACH

Once the iOcore is placed on the Semisphere, your device is ready to be firmly attached.





The Kustom Semisphere Mount attaches to your stock controls. Remove 2 bolts from the controls (left), on the underside of the handlebars, line up the mount, and use included hardware to tighten. Follow factory specs. **Tools needed: 5mm allen wrench**

application notes



Each iOadaptTM utilizes permanent adhesive and is very difficult to remove once applied. Use of an iOskinTM sticker under the iOadapt or a case is recommended. Klock Werks and/or iOmountsTM are not responsible for any damages caused by the removal of the iOadaptTM.


Clean the surface of your device. Center the iOadapt™ then apply with firm pressure to device or case while on a flat surface. Allow adhesive to set at least 1 hour before first use. For best results, let it set overnight.

iOadapts supplied with the nomad™ and motorcycle-specific mounts are intended for phones and smaller devices only, and will not support full size tablets, e-readers and larger devices.

Center the iOadapt™ on your device!

Apply with pressure!

Allow 1 hr for adhesive

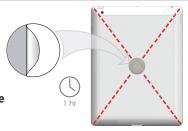

iOmounts™ components



iOadapt™: A stainless steel disk that attaches to your smartphone, tablet, e-reader or other approved device. The iOadapt™ is **NOT A MAGNET!**

iOcore™: A magnetic cylinder that connects your devices to the motorcycle mounts, stands, wall mounts, car mounts and other iOmounts™ products once the iOadapt is adhered to your device. (Available in many colors.)





iOskin™: A non-essential but recommended addition. Apply the sticker on your device then attach the iOadapt™ on top of your sticker for easier removal.