

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com

www.puig.tv - www.puigusa.com

Ref.: 8140

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

KIT SOPORTE CBRIS PUIG PARA GPS ORIGINAL KTM 1290 SUPERDUKE SPECIAL SUPPORTS KIT FOR PUIG SCREEN FOR KTM 1290 SUPERDUKE WITH ORIGINAL GPS



	ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.
Conjunto carenabris Ref. 7014 Windshield kit Ref. 7014	1		Carenabris Touring	Touring windshield	1
	2		Soporte metálico Cbris derecho	Right metal windshield support	1
	3		Soporte metálico Cbris izquierdo	Left metal windshield support	1
	4		Visera Anti-reflectante	Anti-reflect Visor	1
	5		Casquillo metálico Ø int. 8,5 x Ø ext. 14x20 mm	Ø inner 8,5 x Ø outer 14x20 mm arrowhead	2
	6		Tornillo Allen DIN 912 M8x55 (negro)	DIN 912 M8x55 (black) Allen screw	2
	7		Silentblock M5	M5 Silentblock	4
	8		Arandela de nylon M5x0,5	M5x0,5 nylon washer	4
	9		Tornillo Allen M5x16 ISO 7380 (negro)	M5x16 ISO 7380 (black) Allen screw	4
Kit soportes GPS 8140 Supports Kit for GPS 8140	10		Soporte metálico GPS derecho	Right metal GPS support	1
	11		Soporte metálico GPS izquierdo	Left metal GPS support	1
	7		Silentblock M5	M5 Silentblock	4
	9		Tornillo Allen M5x16 ISO 7380 (negro)	M5x16 ISO 7380 (black) Allen screw	4

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN





Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com

www.puig.tv - www.puigusa.com

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

KIT SOPORTE CBRIS PUIG PARA GPS ORIGINAL KTM 1290 SUPERDUKE SPECIAL SUPPORTS KIT FOR PUIG SCREEN FOR KTM 1290 SUPERDUKE WITH ORIGINAL GPS

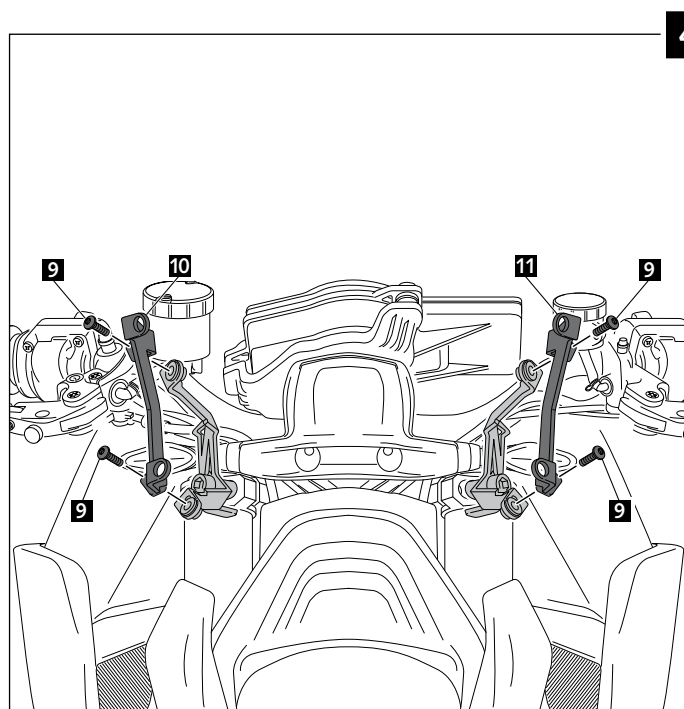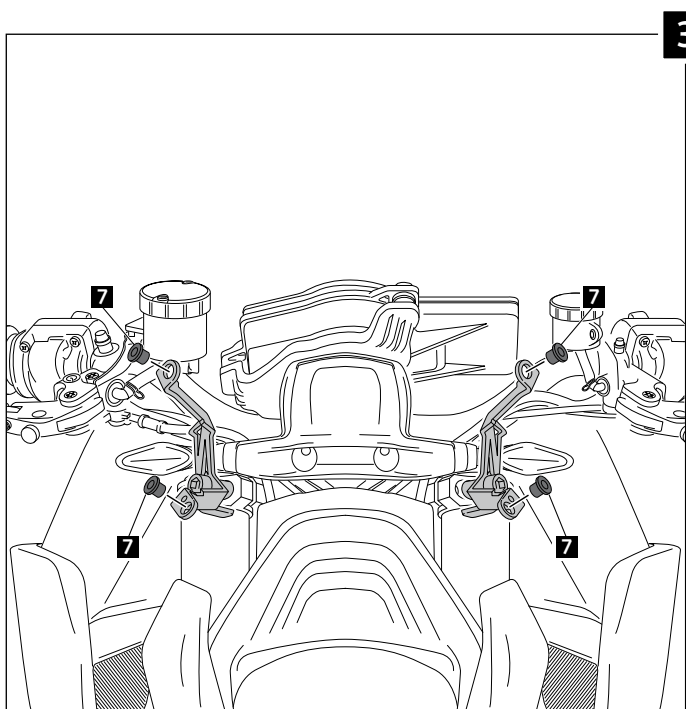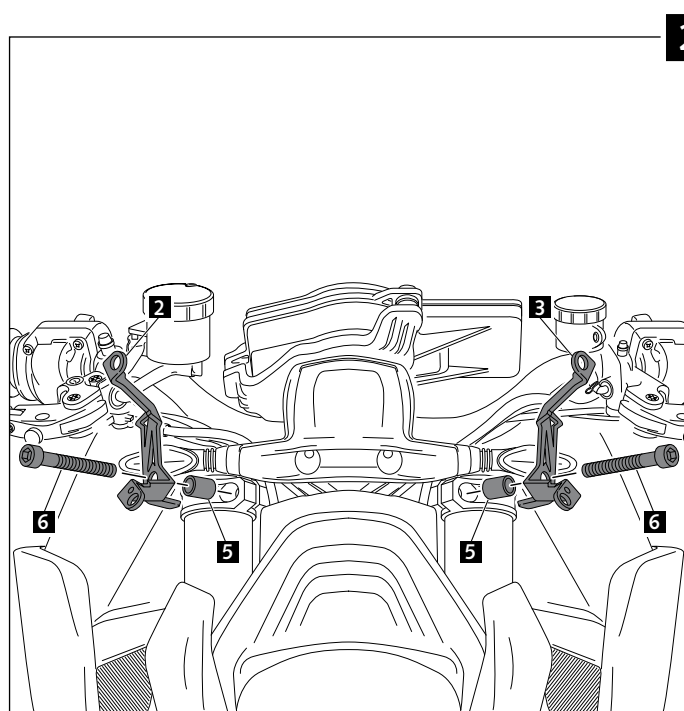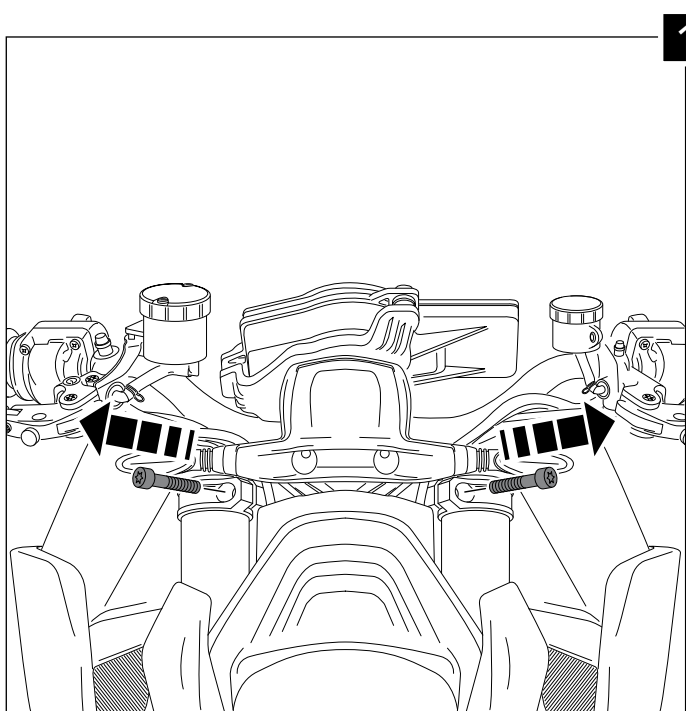

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN



Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com

www.puig.tv - www.puigusa.com

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

KIT SOPORTE CBRIS PUIG PARA GPS ORIGINAL KTM 1290 SUPERDUKE SPECIAL SUPPORTS KIT FOR PUIG SCREEN FOR KTM 1290 SUPERDUKE WITH ORIGINAL GPS

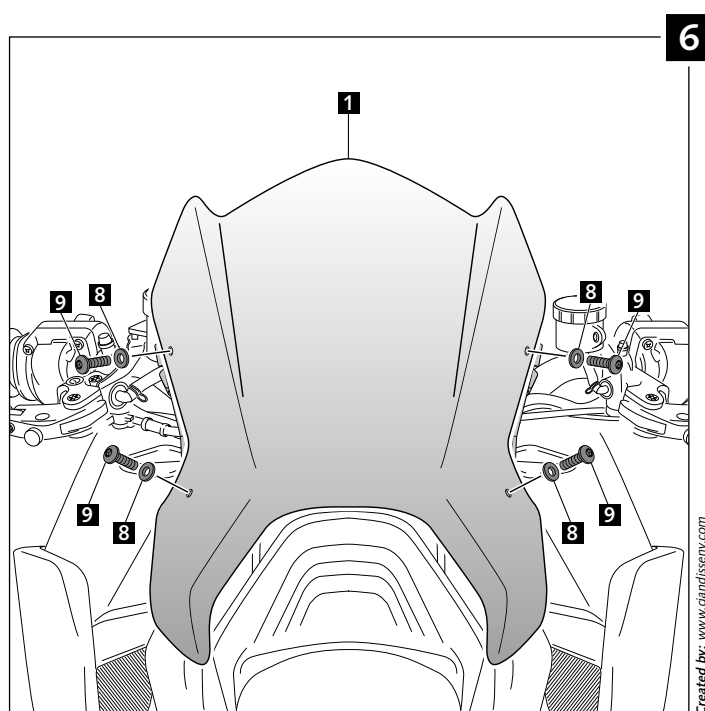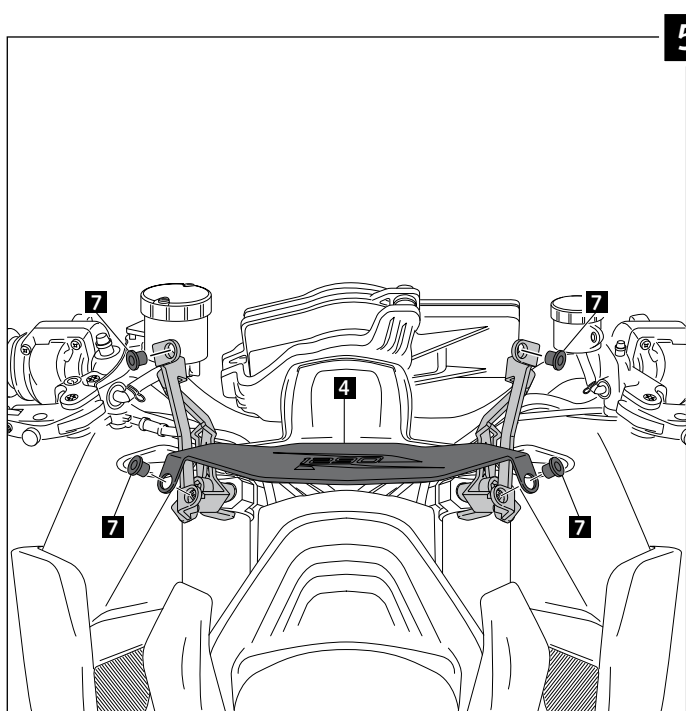

Created by: www.dandisseny.com