


V3 FRAME SLIDERS KIT 2.0

KAWASAKI NINJA 300

year of production: ALL


product code: SR141

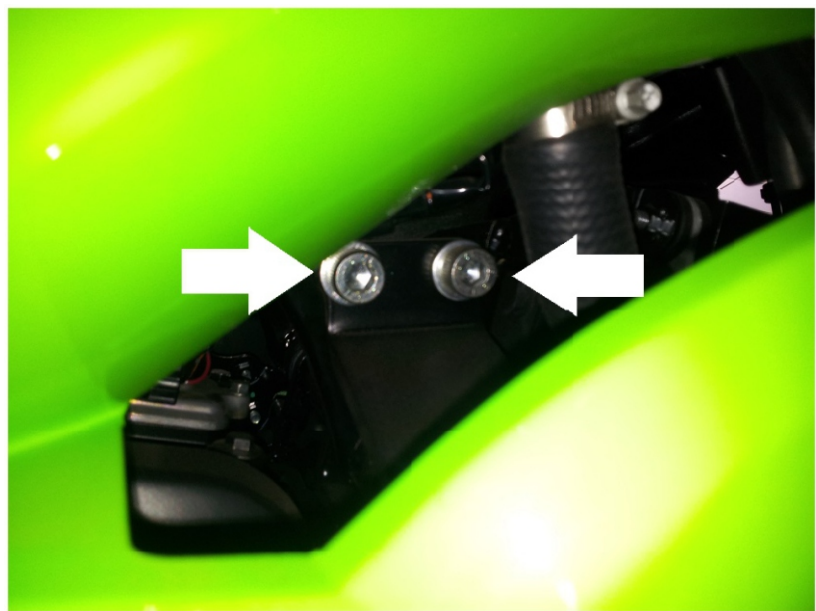

Assembly position  
(both sides)

Assembly instructions

- 1. Remove the fairings on both sides.
  - 2. Please check the assembly positions on the image above. Remove the original bolts indicated with the arrow on the image above.
  - 3. Replace the original bolts with the new mounting bolts (parts #7,#8), nuts (parts #11), washers (parts #12) and metal adapters (parts #6) and put these parts in the right order shown on the assembly scheme on the right page. Put the adapters (parts #6) in the right positions according to the assembly scheme.
  - 4. Please assemble the fairings.
  - 7. Assemble the sliders, round cylindrical body, the bolts, steel sleeve and the spacers (parts #1, #2, #3, #4 and #5) according to the drawing on the right page. Put them into the threaded holes in the adapter (part #6).
- We suggest to use the threadlocker (eg. Loctite) to make sure that the vibrations of the engine do not loosen the bolts.

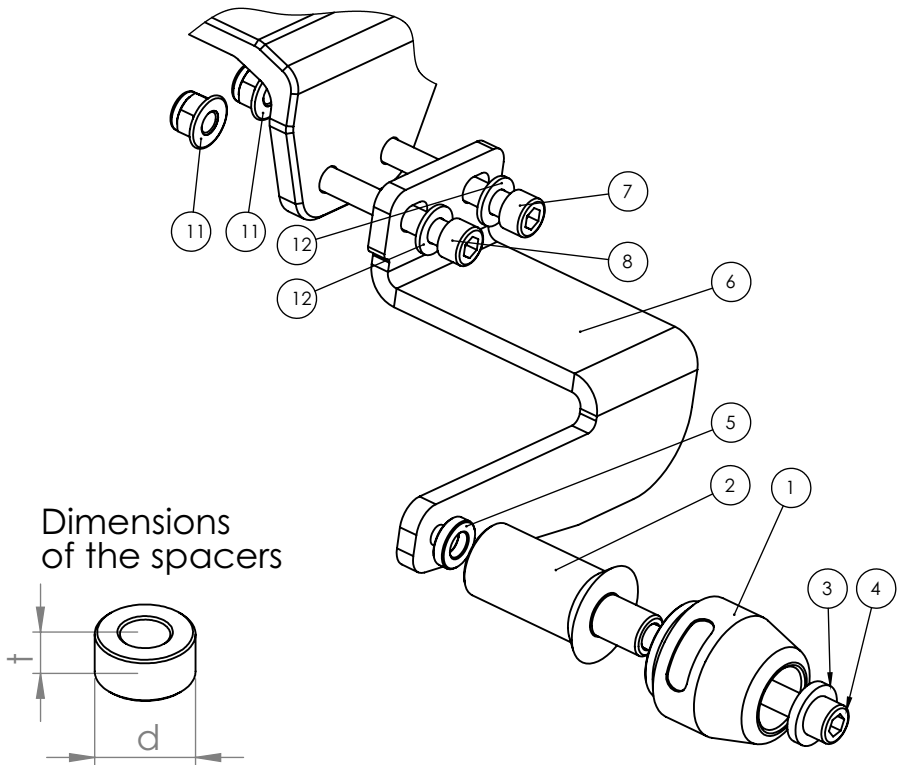

Assembly scheme (both sides)

| Part # | Part name              | Left side (as You sit on the motorbike)              | Right side                                           |
|--------|------------------------|------------------------------------------------------|------------------------------------------------------|
| 1      | Slider                 | 1 pcs.                                               | 1 pcs.                                               |
| 2      | Round cylindrical body | L = 80 mm                                            | L = 80 mm                                            |
| 3      | Steel sleeve           | 1 pcs.                                               | 1 pcs.                                               |
| 4      | Allen bolt (8,8 class) | M10x100 mm                                           | M10x100 mm                                           |
| 5      | Spacer                 | t=20 mm, d=5 mm                                      | t=20 mm, d=5 mm                                      |
| 6      | Adapter                | Steel                                                | Steel                                                |
| 7      | Mounting bolt 1        | M10X65                                               | M10X65                                               |
| 8      | Mounting bolt 2        | M10X65                                               | M10X65                                               |
| 9      | Spacer 1               | -                                                    | -                                                    |
| 10     | Spacer 2               | -                                                    | -                                                    |
| 11     | Nut                    | 2 pcs. M10 to be mounted on M10X65 bolts             | 2 pcs. M10 to be mounted on M10X65 bolts             |
| 12     | Washer                 | 2 pcs. M10 to be put under the heads of M10X65 bolts | 2 pcs. M10 to be put under the heads of M10X65 bolts |

Legal note. This product is a professional accessory to be used on the race track. Neither manufacturer, nor Seller take responsibility for any damages occurred despite of using protective accessories. For more information go to [vortexracing.com](http://vortexracing.com)