


NEW RAGE CYCLES

INSTALLATION INSTRUCTIONS

YAMAHA MT-09

FRONT TURN SIGNALS (2017-PRESENT)

- 1 Remove side panel bolt using a 4mm allen key. There is one on each side. (Picture 1)
- 2 Remove (2) push clips on either side of the bike. (Picture 2)
- 3 Disconnect factory turn signal connectors; one on either side. (Picture 3)
- 4 Remove radiator cover bolts; two on either side with a 4mm allen key. (Picture 4)
- 5 Remove (2) turn signal bolts on either side with a 10mm socket. (Picture 5)

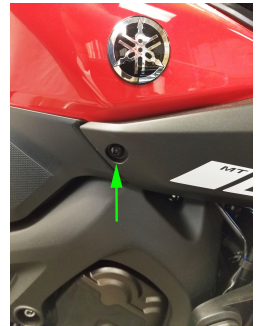

NEW RAGE CYCLES

INSTALLATION INSTRUCTIONS

FRONT TURN SIGNALS (2017-PRESENT)

- 6 Remove clip nuts from stock turn signals. (Picture 6)
- 7 Install clip nuts onto new turn signal bracket. (Picture 7)
- 8 Install new turn signal bracket with provided M6x10 bolts. (Picture 8/9)
- 9 Reinstall radiator cover.
- 10 Run connector up to factory harness, plug in, and test turn signals.
- 11 Reinstall side panel with stock bolt.

