

# **“2002-2013” Kawasaki Prairie 360**


Winch Mount

PART #100570

Hardware Kit: HK-018

## **Kit Components:**


<u>Qty</u>	<u>Part Description</u>
1.....	Winch Mount
4.....	5/16”x1-1/4”x1-3/4” U-Bolt
8.....	5/16” Nylock Nut
8.....	5/16” SAE Flat Washer

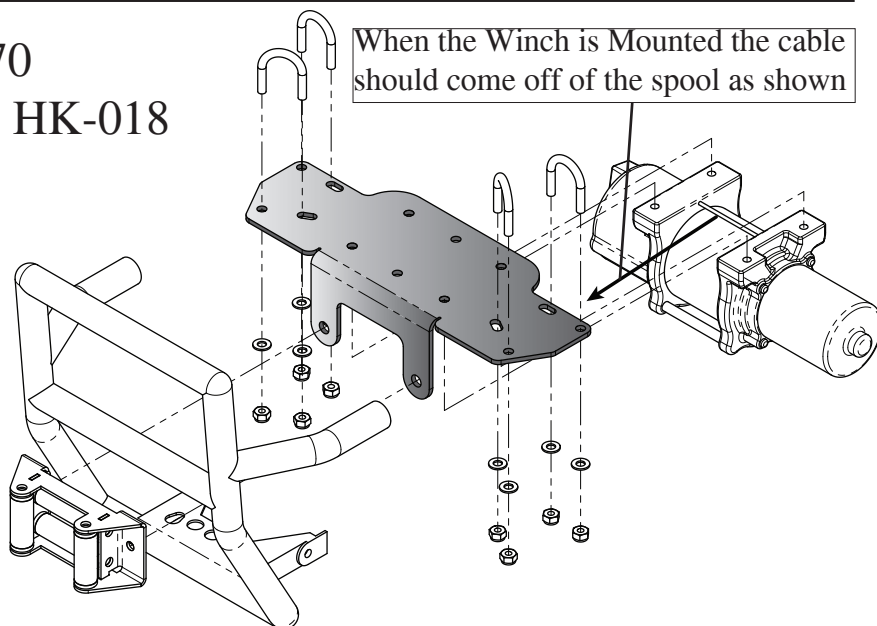

*“Figure 1”*

## **INSTALLATION INSTRUCTIONS:**

1. Begin by assembling the mount to your front tube bumper as shown in Figure 1 and 2 using the supplied U-Bolts. Do Not tighten U-Bolts at this time.(Figure 1 & 2)
2. Assemble your Fairlead to the mounting bracket using the hardware that was supplied with your Fairlead and tighten. (Figure 1 & 2)
3. Assemble your Winch to the mounting bracket using the hardware that was supplied with your Winch and tighten. (Figure 1 & 2)
4. At this time, tighten the U-bolts from Step 1.
5. Using the instructions provided with your winch, wire accordingly.

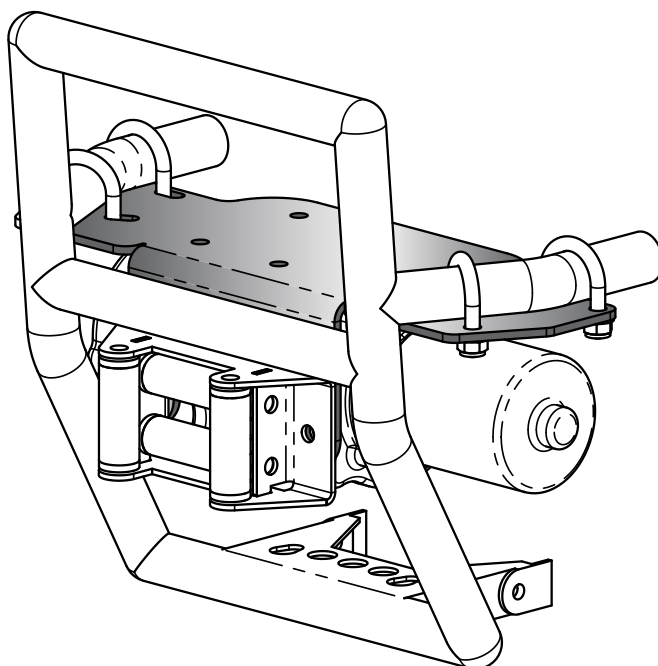

*“Figure 2” Front of ATV*

