

Custom Dynamics® 5.75" Softail Headlight Bucket Installation Instructions

We thank you for purchasing the Custom Dynamics® 5.75" Softail Headlight Bucket. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: CD-18ST-BUCKET

Package Contents:

- Headlight Bucket Assembly(1)
- Mounting Hardware (1)

Fits: 2018-2022 Harley-Davidson® Low Rider (FXLR), Street Bob (FXBB/FXBBS) and 2020-2022 Softail Standard (FXST) with aftermarket mounting block.

2018-2022 Low Rider S (FXLRS) with CD-FXLRS-MOUNT (Sold Separately).



Installation:

- 1. Refer to the factory service manual and remove the OEM headlight and headlight mount from the lower triple tree.
- 2. Confirm the Alignment Ring is positioned flat and orientated correctly inside the Headlight Bucket. Refer to Photo 1.




ATTENTION



Please read all Information below before Installation

<u>Warning</u>: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

<u>Safety First</u>: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

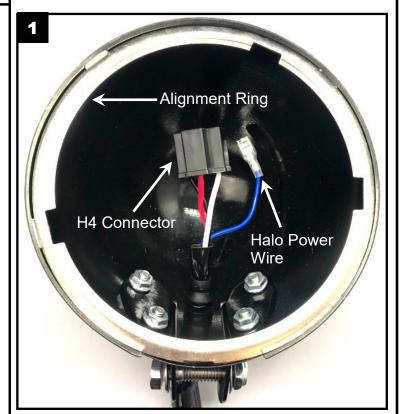

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2.		
Installation:		
3.	Connect the H4 connector to the Headlight (Sold Separately). Connect the Halo Power Wire to the Headlight if, the Headlight is equipped with an external Halo Power Wire.	
4.	Place the headlamp in the Alignment Ring.	
5.	Install the outer trim ring on the Headlight Bucket and tighten to secure the Headlight in the bucket.	
6.	Using the provided mounting hardware, install the Headlight Bucket to the mounting block on the lower triple tree.	
7.	Test high and low beam functions of headlamp.	
8.	Properly Aim the headlamp for maximum performance.	
C	Ouestions? Call us at: 1 (800) 382-1388 M-TH	8:30AM-5:30PM / FR 9:30AM-5:30PM FST