



ADJUSTABLE PASSENGER COMFORT PEG MOUNTS

Parts Included:

2	Mounts		
2	Extension Arms		
2	Clevis		
1	Hardware Kit Including:		
2	3/8"-16 x 2" SHCS	2	D Springs
2	3/8"-24 x 7/8" SHCS	2	4-40 x 3/8" BSHCS
2	3/8" Split Lock Washers	2	Tab Springs
2	3/8"-24 x 1-1/8" SHCS		

Installation Instructions:

1. Park on a level surface and shut off the motorcycle. Ensure that the engine has time to cool before installation.
2. Adjust the OEM footrest mount into either of the two lower positions.
3. Preassemble the **Ciro** mount and extension arm with the 3/8"-16 x 2" SHCS and 3/8" split lock washer.



4. Holding the assembly together, thread the 3/8"-16 x 2" SHCS into the motorcycle frame using a 5/16" hex wrench until secure. Do not fully tighten yet.
5. The **Ciro** mount should be located immediately above the head of the OEM peg mount bolt.



OEM peg mount
bolt

WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All **Ciro** products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:

Ciro products are designed and manufactured under very strict quality control. **Ciro** products are warranted to be free of defects in material and workmanship for 1 (one) year from date of purchase by the consumer.

Ciro will have no obligation if the customer cannot show proof of purchase.

Warranty will not be granted unless the part is properly installed and maintained.

Ciro will not be liable for any consequential and incidental damages, including labor, or non-**Ciro** products.

Please visit our website Ciro3d.com for our complete warranty policy.


CIRO3D.COM

6. Using a 3/8"-24 x 7/8" SHCS and 3/8" split lock washer, install the Giro clevis onto the Giro arm with a 5/16" hex wrench until secure. Do not fully tighten yet.

7. Install the Giro tab spring with the 4-40 x 3/8" BSHCS with a 1/16" hex wrench.

Note: only for use with Giro footpegs and mounts.


Tighten tab spring

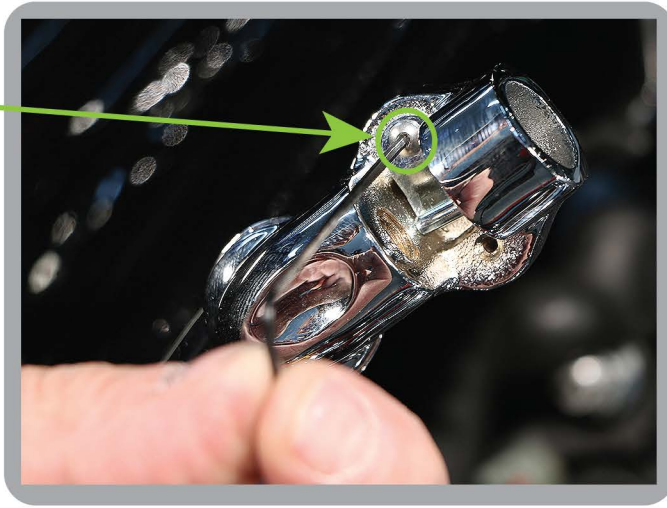

8. Install the footpeg by using a 3/8"-24 x 1-1/8" SHCS with 3/8" split lock washer and D spring.

Torque to 25-35 ft-lbs.

3/8" split lock washer

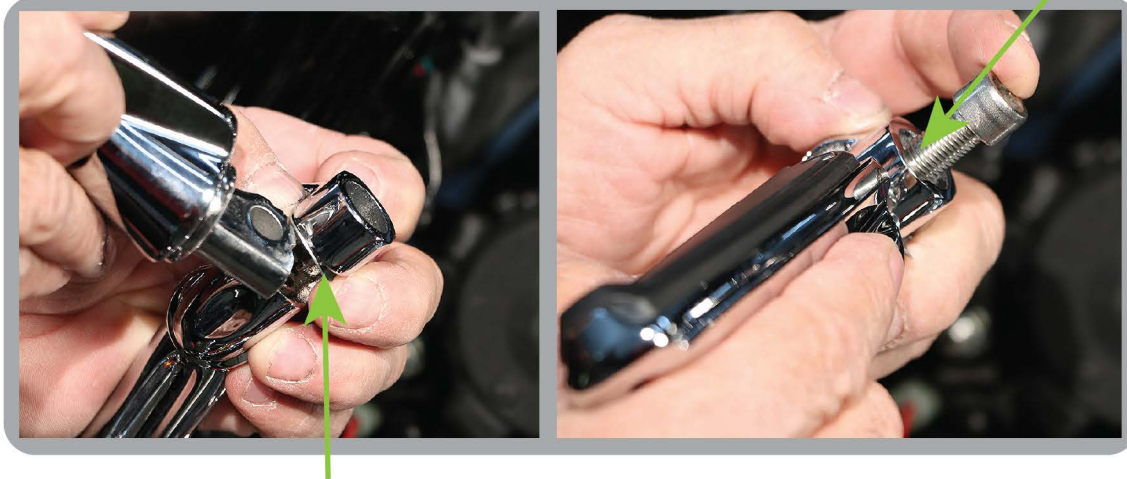

D spring between peg mount and clevis

9. Repeat steps 2-8 on the other side.

10. Adjust peg mounts to desired position and torque each SHCS to 36-42 ft-lbs.

