



GoPro & Action Camera Mounts for Harley Davidson & Indian



Original
Swivel Base



360 Mount



Fork
Mount



Clamp
Mount



Rickrak
Wrench



Original
Swivel Base
on fairing



360 Mount
on fairing



Original
Swivel Base
on fork mount



360 Mount
on fork mount



Original
Swivel Base
on clamp



360 Mount
on clamp



360 Mount and Swivel Base
easily mount on Indian Fairing



GoPro & Action Camera Mounts for Harley Davidson & Indian

Installation Instructions

Fairing mount:

Harley Davidson

Bat Wing

Tri Glide

Ultra

Limited

Road Glide

1. Remove windshield fairing screw from fairing, (left side is recommended).
2. Screw set screw into fairing. (We provide 4 different lengths to accomodate center fairing screw, and a variety of fairing trims). Road glide fairing requires 10 32 set screw, Batwing fairing utilizes 1/4 20 thread set screw.
3. After leaving about 1/2" of set screw exposed, place rubber washer on set screw and screw either swivel base or 360 base onto set screw, tighten securely.
4. Aim camera as desired and tighten all knobs with supplied wrench.

Windshield Mount:

Heritage

Road King

Indian

1. Remove one bolt & nut from Windshield (left side is recommended). For Indians, remove upper Square nut & bolt on either left or right.
2. Once removed, replace stock bolt with 3/4" x 1/4" x 20 pan head hex bolt by inserting it from back of windshield so that approximately 1/2" is in front of windshield.
3. Place rubber washer (included) over bolt to fit against windshield.
4. Now tighten the GoPro / Action Camera Mount (either 360 or Swivel base unit) Insure it is securely tightened and facing upward.
5. Attach & aim camera and tighten all knobs with supplied wrench.

Clamp Mount - Fits Bars from 7/8" to 1 3/4"




1. Attach either 360 Mount or Swivel Base Mount to clamp.
2. If attaching the 360 mount, use the rubber washer provided nestled between 2 fender washers as shown at left.
3. If attaching the original swivel base, use the fender washer provided next to the clamp and the supplied rubber washer next to the swivel base as shown at left.
4. Clamp to Handlebar, Engine Guard, Rear luggage bars, or any other bars you may have, tighten securely.

Fork Mount

Fits '14 up

Harley Touring Models

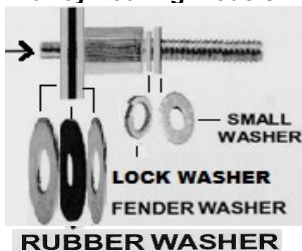

1. Remove front fender bolt on left or right fork.
2. Insert first, the small lock washer then the small flat washer on the long threaded portion of the provided fork bolt.
3. Screw the fork bolt into where the stock fender bolt was removed, tighten securely.
4. Next in order, place the large fender washers & the large rubber washer onto the fork mount bolt as shown.
5. Attach the Swivel Base or 360 mount to the fork mount, making sure the final camera mount is facing straight up.
6. Mount camera, aim camera and securely tighten all knobs with provided wrench.

Additional GoPro Accessories - Enhance your GoPro Experience

GoPro Aluminum Extensions



8"
6"
4"
2"



The Top Grip Kit® enables you to shoot three different angles simultaneously. Just add your favorite cameras!

GoPro Aluminum 90 degree mount



Any Questions?? Let us help you Call 716 969 1694