

INSTRUCTIONS



FLARE® WINDSHIELD FOR SADDLEMEN S-RT FAIRING

INCLUDED COMPONENTS:




- Flare® Windshield
- Installation Instructions

TOOLS NEEDED:

- 1/8" Allen Wrench
- Shine Werks (recommendation)

QUESTIONS?

-  **EMAIL:**
info@getklocked.com
-  **CALL:** (605) 996.3700

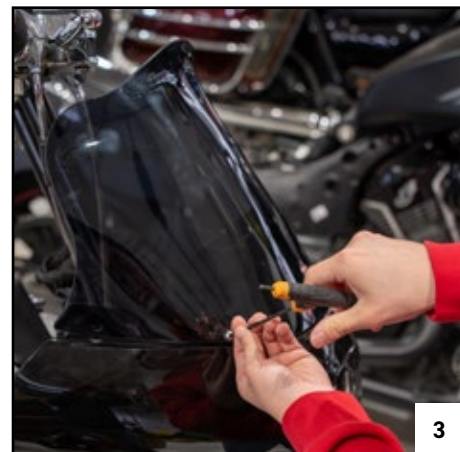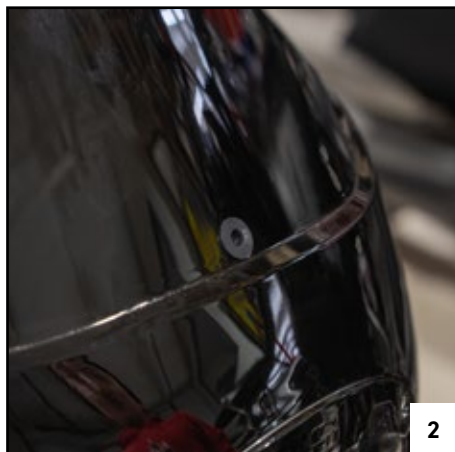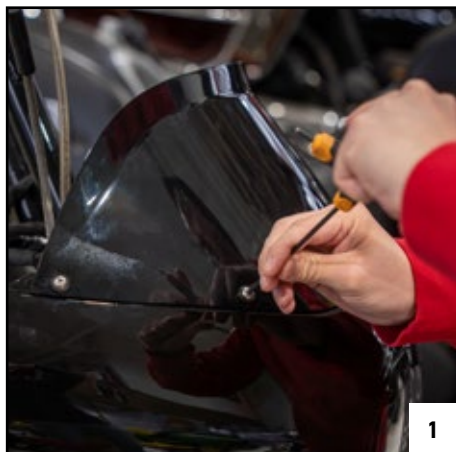

1. Loosen all five windshield fasteners outermost first, finishing with center bolt and carefully remove your windshield from the fairing (FIG 1).
2. Inspect the well-nuts in the fairing (FIG 2). If any are broken or pulled through, Klock Werks offers a replacement kit (part number KWW-HRDWR-0016).
3. Install your new Flare® Windshield with the hardware removed in step 1 and torque to 6-13 in-lbs (0.68-1.47 Nm) (FIG 3).

WELL NUT HARDWARE KIT

FOR H-D FLTR AND FXRP FAIRING

For those FXR fans, the Windshield Hardware Kit for FXRP Fairings supplies you with a complete set of replacement windshield hardware. It's always a good idea to have some spare parts on hand for whatever the ride may throw at you.

- Premium brass threaded insert that not only secures the well nut in place but also enables effortless installation and removal repeatedly.
- Well nuts install quickly and easily into the fairing with just a simple application of pressure.



FOR FXRP, FXRT, AND FXRD FAIRINGS

DESCRIPTION	PART #	SUG. RETAIL
Well Nuts - Pack of 7	KWW-HRDWR-0016	\$19.95

WARNING! Using Loctite® or any type of thread locker on hardware will result in breakdown of the Polycarbonate and cause cracking.

Klock Werks cannot be held responsible for any damage resulting from improper installation performed by any consumer or their dealer.

U.S. Pat. No. D586,274; D632,235; D586,275; D633,017; D626,046; D633,018 Pat. 001050165-0001, 001050165-0002, 001050165-0003 APO No. 324093, 324094, 325192