




Part No. 2320-0176

MEK2013

REVISION 0



1. Kit Contents

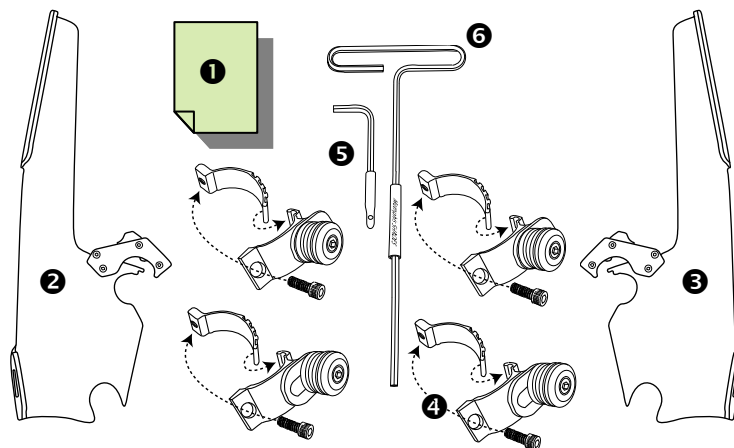

Ref	Code	Part Name	Qty
1	I2013	Mounting Instructions	1
2	M1607EC	Clutch side mounting plate	1
3	M1608EC	Throttle side mounting plate	1
4	S1167	Medium detachable clamp assembly	4
5	M310	Short arm allen wrench, 3/16	1
6	M314	T-Handle Wrench, 3/16	1

2. Mounting Instructions

Additional tools required that are not included in this kit. 1/2" wrench, 7/16" wrench.

1. **Cover gas tank and front fender with towels to avoid damage during installation.**

2. Install the two Mounting plates 2 and 3 onto the fairing using the nuts and washers supplied. The small tab goes to the bottom of the fairing, the big one goes to the top. *The tabs point out away from the headlight* (Fig. 2)

3. Loosely install the four Fork Clamps on the forks, approximately 2" apart. (Fig 2)

4. Start with Fork Clamp Bushing adjusted to rear of slot (Fig 4) Then adjust as needed and check for clearance. (See warning above.)

5. Slip the windshield mounting plates and windshield onto the fork clamps, (Figs 3 and 5) and secure the left and right side locking mechanism.

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

For Parts and Warranty Help, Contact:

Memphis Shades, Inc.

P.O. Box 429

Rossville, TN 38066

(901) 853 0293

Visit us on the web at www.memphisshades.com or you can also reach us by email:

customerservice@memphisshades.com

Trigger-Lock Mounting Kit - Polished Memphis Fats / Slim Windshield HD FXDL 2014 and up

Aluminum parts are electrocoated (E-coated)
for durability and weather resistance.

Before assembly, read Warnings inside



WARNING

1. During installation, make sure that the fairing / windshield and hardware do not interfere with any cables or wiring when the forks are turned all the way in either direction. Also make sure, through the full range of adjustment, that the fairing / windshield and hardware do not hit the gas tank.
2. This is a detachable fairing / windshield, ALWAYS make sure the locking mechanism is fully engaged.
3. The improper installation of this kit and related components could result in serious injury or death.



CAUTION

1. Memphis Shades fairings / windshields are made from Lucite® acrylic, and will last for years with proper care. Clean your fairing with plenty of soapy water (mild dish-washing liquid is best) and a soft cotton cloth. Use your bare hands to feel and dislodge bugs, or cover with a wet, soapy towel and let it soak. Don't use paper towels and scrape with anything. Small scratches can be removed with NOVUS #2.
2. Never use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."
3. Glass cleansing agents will cause severe damage to your fairing, and will void your warranty. For care and cleaning we recommend using **Memphis Shades All Kleer**, a unique cleaner/polish, bug remover and rain repellent that leaves a super slick surface that makes the next cleaning even easier.
4. At certain times of the day the Sunlight can reflect off the curvature of a fairing / windshield and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the fairing / windshield to avoid reflections.



#memphisshades

2. Mounting Instructions, continued

6. Adjust the height, angle and alignment of the windshield and tighten **ALL** bolts. (Fig. 7)

Note: This is a detachable windshield, **ALWAYS** make sure the **Locking Mechanism is Fully Engaged** after installing the windshield! (Fig 6)

Fig. 1

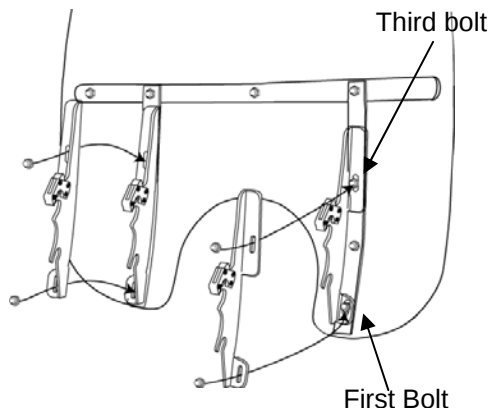


Fig. 2

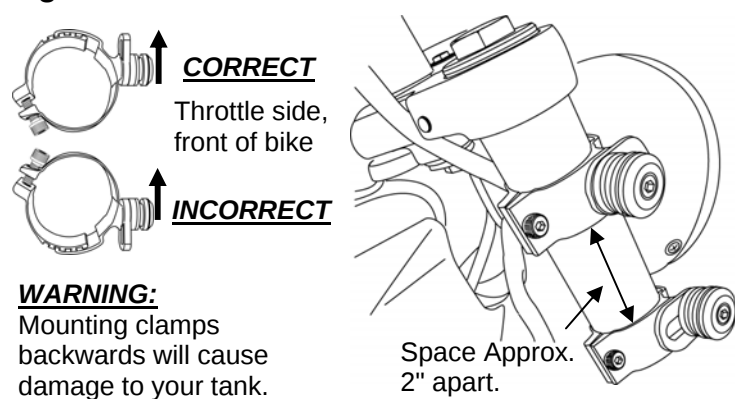


Fig. 3

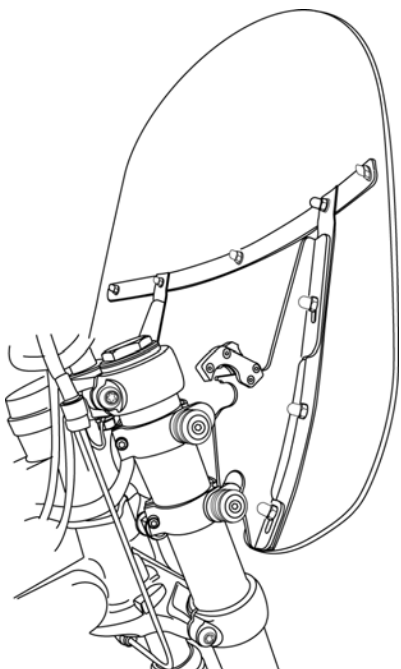


Fig. 4

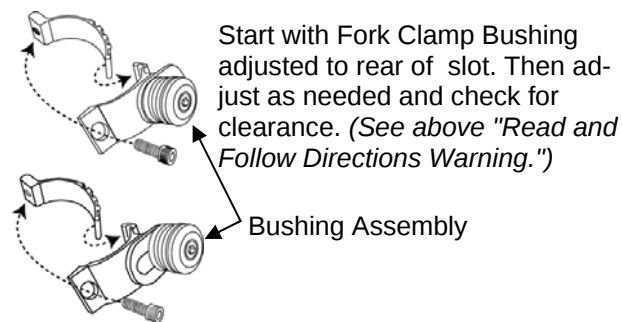


Fig. 5

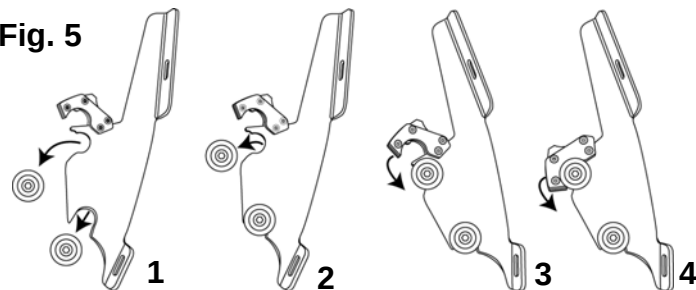


Fig. 6

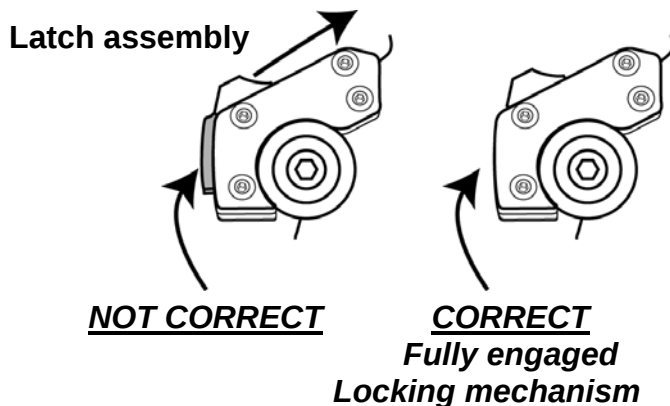


Fig. 7

